

Engine Management (Z 22 SE)

Engine	Z 22 SE
Description	GMPT-E15
Firing order	1-3-4-2
Spark plugs	AC 41-954