


Battery, Replace

1. Open bonnet
2. Remove windscreen wash reservoir from mounting bracket
3. Release heater duct from bulkhead
 - Push fit
4. Disconnect battery leads
 - Remove 2x nut

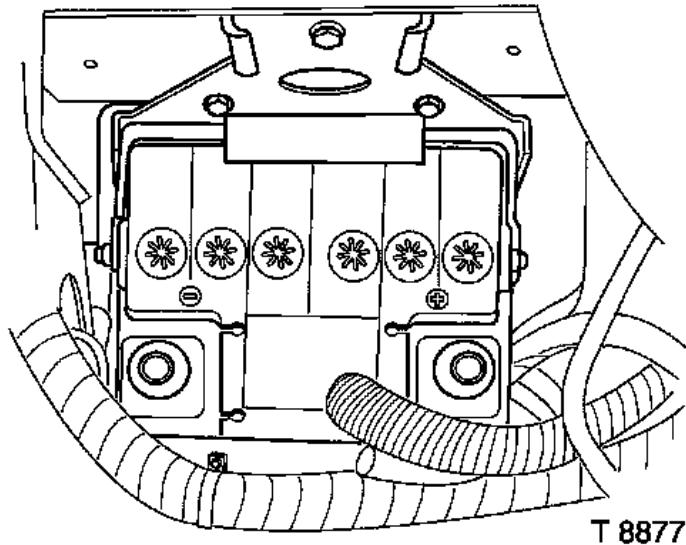

5. Remove battery clamp from bulkhead
 - Remove 3x clamp bolt
6. Remove battery from vehicle
7. Remove leak hose from battery and install to new battery
 - Push fit
8. Install battery to vehicle
9. Install battery clamp to bulkhead
 - Install 3x clamp bolt
10. Connect leads to battery
 - Install 2x nut
11. Secure heater duct to bulkhead
 - Push fit
12. Install windscreen wash reservoir to mounting bracket
13. Close bonnet